

B.O.B

BOB TRAILERS, INC.
13501 South Ridge Dr.
Charlotte, NC 28273


DRY SAK INSTRUCTIONS



1) Make sure all sharp objects are covered to prevent punctures in the DRY SAK wall. Place heaviest objects in the bottom for maximum stability.




2) Flatten the opening length-wise. The 2 black plastic rim strips should touch.

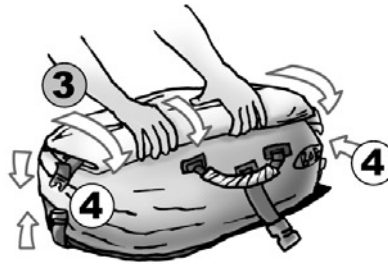

3) Roll the top down, as you would a paper bag, around the plastic strips. 4) Fasten the buckles at each end of the roll to the buckles sewn to the base of the SAK.

5) Connect the center buckle over the 2 handles and synch tight.

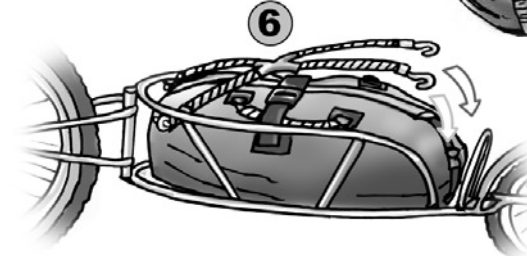

6) Place Black section of SAK towards rear and hook spider bungee to frame tubes and / or lash points to retain DRY SAK in cargo area.

800-893-2447 WWW.BOBGEAR.COM
E-MAIL: BOB@BOBGEAR.COM

OMT04B

B.O.B

BOB TRAILERS, INC.
13501 South Ridge Dr.
Charlotte, NC 28273


DRY SAK INSTRUCTIONS



1) Make sure all sharp objects are covered to prevent punctures in the DRY SAK wall. Place heaviest objects in the bottom for maximum stability.




2) Flatten the opening length-wise. The 2 black plastic rim strips should touch.

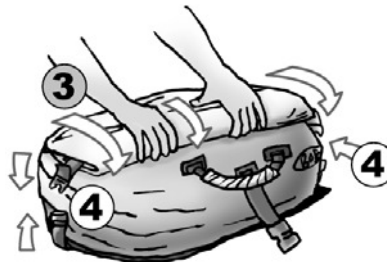

3) Roll the top down, as you would a paper bag, around the plastic strips. 4) Fasten the buckles at each end of the roll to the buckles sewn to the base of the SAK.

5) Connect the center buckle over the 2 handles and synch tight.

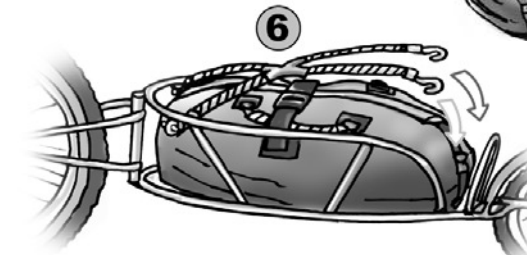

6) Place Black section of SAK towards rear and hook spider bungee to frame tubes and / or lash points to retain DRY SAK in cargo area.

800-893-2447 WWW.BOBGEAR.COM
E-MAIL: BOB@BOBGEAR.COM

OMT04B